## GPS USB driver installation guide

For Windows2000 and WindowsXP, follow the steps below to install driver.


- 1. Run **PL-2303Driver\_[...].exe**
- 2. If you've installed an old version driver, then the following picture may appear. Press "**Re-install (Upgrade)!**"



3. If there appears window below, press "Continue Anyway".

Software Installation	
<u>.</u>	The software you are installing has not passed Windows Logo testing to verify its compatibility with Windows XP. ( <u>Tell me why</u> this testing is important.) Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the software vendor for software that has passed Windows Logo testing.
	Continue Anyway STOP Installation

4. Press "Finish".

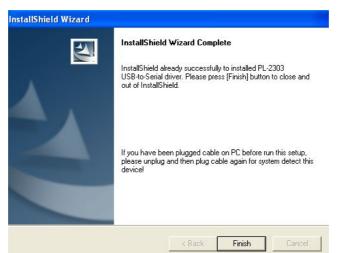

For Windows XP, further steps are needed.

- 5. Plug-in GPS receiver. (If you've plugged it, unplug and then re-plug.)
- 6. There will come out a "Found New Hardware" window as below.
  - Select "Install the software automatically" and press "Next".



7. Press "Continue Anyway" after the window below appears.

1	The software you are installing for this hardware:
-	Prolific USB-to-Serial Comm Port
	has not passed Windows Logo testing to verify its compatibility with Windows XP. ( <u>Tell me why this testing is important.</u> )
	Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has

8. You will see the OS is copying the driver.



## 9. Press "Finish".



Till now, the GPS USB driver has been installed successfully. You can check it by Device Manager as shown below.



For Windows XP, pluging PGM-111 into different USB ports needs to repeat steps 5 ~9.

If you failed in installation, you can remove every possible GPS USB driver installed before by running **PL-2303-Driver\_[...].exe** and select **"Uninstall driver!**". After re-start computer, repeat installation procedures as described above.